

CORDLESS RIVET TOOL

FOR STANDARD RIVET Ø2.4 TO Ø4.8 mm

E-005



ELEMENT
ZERO ZERO FIVE **005**


SPECIFICATIONS

- Capacity:** Blind rivet Ø2.4 to Ø4.8 mm, all materials.
- Traction power:** 6,000 N
- Stroke:** 26 mm
- Weight (incl. battery):** 1.33 kg
- Autonomy:** 1 battery charge (steel rivet 4.8x10=400)
- Battery:** 18 V Li-ion - 2.0 Ah with charger indicator.
- Charger:** 18V - battery charging time 2.0 Ah = 100% in 30 minutes
- Warranty:** 1 year

FEATURES



3 NOSE PIECES LOCATED AT THE BACK OF THE TOOL

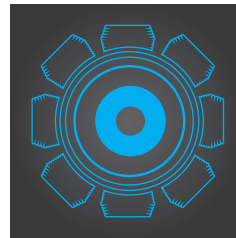

BRUSHLESS MOTOR (COAL FREE):

- INCREASE DURABILITY (REDUCES WEAR)
- LESS ENERGY (BETTER AUTONOMY)
- NOISE REDUCTION



SAME BATTERY AND CHARGER AS OTHER ELEMENT TOOLS

FAST CHARGE IN 30 MIN



3 LEDS TO ILLUMINATE THE WORK ZONE



SMOOTH TRIGGER AND GRIP

CAPACITY

RIVETS	Ø2.4	Ø3.0/3.2	Ø4.0	Ø4.8
ALUMINIUM	✓	✓	✓	✓
STEEL	✓	✓	✓	✓
STAINLESS STEEL	✓	✓	✓	✓

REFERENCES



Rigid carrying case

- **Accessories included:**
- 4 nosepieces Ø2.4 to 4.8mm for standard rivet.
- 1 mounting wrench.
- 1 additional jaws set.
- 1 rigid carrying case. (version E-005-1XBAT)

REFERENCE	CONTENTS				
	RIVETING TOOL E-005	BATTERY 18V LI-ION -2.0AH	QUICK CHARGER 18V	ACCESSORIES	RIGID CARRYING CASE
E-005-1XBAT	1	1	1	1	1
E-005-BODY	1			1	
E-BATT		1			
E-CHARG			1		

OPERATING INSTRUCTIONS



- 1 Trigger
- 2 Nosepiece
- 3 Nosepiece storage
- 4 Battery charge test button
- 5 Battery charge indicator
- 6 Unlock battery buttons
- 7 LED lights
- 8 Reverse button

● RIVETING:

1- Choose the nosepiece according to the diameter of the rivet to set.

⚠ ATTENTION
the use of the wrong nosepiece can damage the tool.

2 - Check that the «Screwing/unscrewing» button **8** is in the «Screwing» position (*i.e. pushed in from the right side*).

3 - Place the rivet mandrel into the nosepiece.

4 - Place the rivet body in the hole of the assembling part.

5 - Operate the trigger **1** until the rivet mandrel breaks.

6 - Tilt the E-005 forward to remove the broken mandrel. If the rivet mandrel is not broken off the first time, repeat the operation.

● REPLACING NOSEPIECE:

Nosepieces **2** and **3** are marked with rivet diameters. Do not use a tool to change the nosepiece. Simply unscrew/ screw the nose piece by hand. Simply unscrew/screw the nose piece by hand.

● LED LIGHTS:

The tool is equipped with 3 powerful LED lights **7** to light up the working area.

Turn on the light only

Press the trigger half way to turn on the light. The lights will shutdown after 10 seconds.

Turn on the tool with the lights on

Press the trigger to set the rivet. The lights turn on and remain on until 10 seconds after the trigger is released.



● REPLACING JAW SETS:

See user manual.

● REMOVE THE BATTERY:

Battery is locked to the riveting tool with a spring. To remove the battery, press the 2 unlock buttons **6** and slide the battery. Do not force it.

● BATTERY LEVEL INDICATOR:

4 lights on the battery panel allows you to check the remaining power. Press and hold the blue button **4** to check the battery level:



4 lights on : 100% remaining

3 lights on : 75% remaining


2 lights on : 50% remaining

1 light on : 25% remaining

The information on the battery panel can vary (+/- 5%) due to environmental conditions.

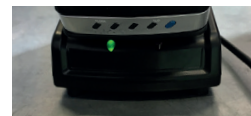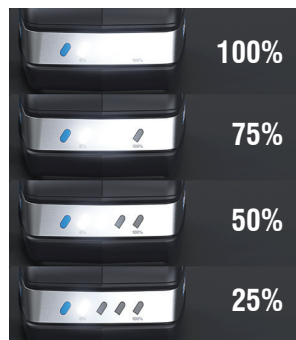

Green light on the charger: the battery is fully charged

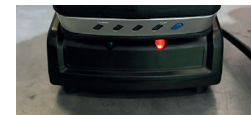

Red light on the charger: the battery has to be charged

MAINTENANCE / TROUBLESHOOTING / SAFETY INFORMATION

See details and illustrations in user manual.