




# HAND RIVETER

## ■ Contents


1 Hand Riveter • 4 nosepieces • 1 wrench

## ■ Rivet Range


|  | ø2.4<br>3/32" | ø3.0/3.2<br>1/8" | ø4.0<br>5/32" | ø4.8/5.0<br>3/16" |
|---|---------------|------------------|---------------|-------------------|
| Aluminium   | ✓             | ✓                | ✓             | ✓                 |
| Steel   | ✓             | ✓                | ✓             | ✓                 |
| Stainless steel A2  | ✓             | ✓                | ✓             | ✗                 |

## ■ Operating instructions:


1. Drill hole.

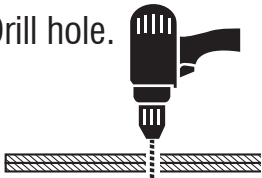


2. Insert rivet

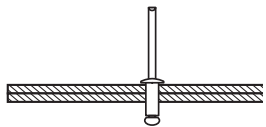


3. Open grip handle.  
and insert onto  
mandrel.

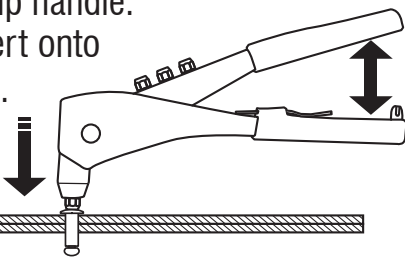

4. Clamp the grip handle together.  
Repeat until the mandrel  
of the rivet  
breaks off.

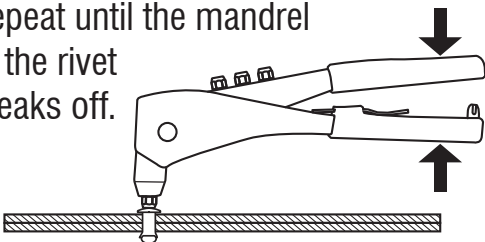


5. Relax handle grip & drop  
mandrel out of back.

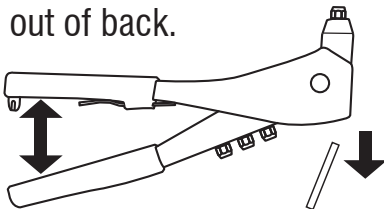

## ■ Change Nosepiece

Use wrench  
provided to  
detach and attach  
nosepieces.

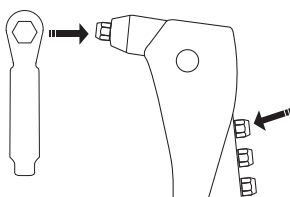

For more information go to: [www.scellit.co.uk](http://www.scellit.co.uk)